

Service & maintenance checklist

Incline function Water Treadmill

Adjust speed decline

1. Check blue coloured screw at the side of hydraulic engine (placed under the user platform)
2. Turn clockwise means SLOW down the decline, turn anti clockwise means SPEEDEN UP the decline
3. Try first with no horse on the water treadmill; speed should be very slow (adjust if necessary)
4. Try with horse on the water treadmill. If speed too fast turn screw anti clockwise to slow down. If speed too slow down turn screw clockwise.
5. Once the speed is adjusted there is no need to readjust the incline/decline speed again.

Important notice!

- For service & maintenance there might be necessary th block the incline by turning the screw clockwise to end for full closing the incline.
- For service & maintenance there might be necessary th block the incline by turning the screw clockwise to end for full closing the incline.
- Any malfunction is to be immediately reported to local service team.